

# Eric's Heritage tips of the month

Tip #3: Removing trim – without damage  
(hopefully!)



1) Cut the paint bond






4) Gently open the gap



Move up to a  
thicker flat-bar

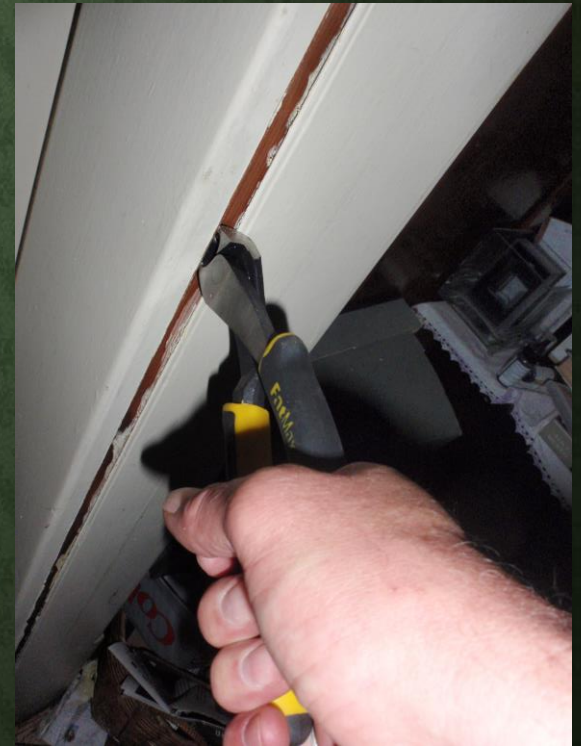

5) Cut nails if  
necessary





6) Once the board is removed, pull nails through from the backside – don't hammer them back